

Additional Instructions

Off-line Switch

To take the Sprint off-line (dis-enable) set the toggle switch up. This will enable the user to LOAD or SAVE programs to a standard audio cassette recorder in the usual manner. It will also allow the use of Interface 1 and microdrive commands. When use of the Sprint for loading or saving is required, set the toggle switch down. The switch should not be used during a LOAD or SAVE as the computer will crash.